



# DS9900 Series Hybrid Scanner

## Accessory Guide



# Customize Your Solution With A Full Range Of Accessories



We offer a choice of power supplies, battery packs, capacitors, USB adapters, mounts and holsters to fit every barcode scanning need. Enhance productivity for your workforce with accessories designed to complement and enhance scanner operation. Part numbers may vary by region.

# Mounting Brackets

- Multi-Mount Bracket
  - Allows the scanner to be mounted horizontally (ie. tabletop) or vertically (ie. wall).
  - Mounted with screws or double-sided tape
  - The scanner can be slid in and out of the bracket as needed.
  - Compatible with DS9908 only, will not fit the DS9908R
  - Part Numbers:
    - BRKT-MM0099C-04
      - Multi-Mount - DS9908 (Midnight Black)
    - BRKT-MM0099C-0W
      - Multi-Mount - DS9908 (Alpine White)



 
# Cable options

## USB

Series A



Power Plus

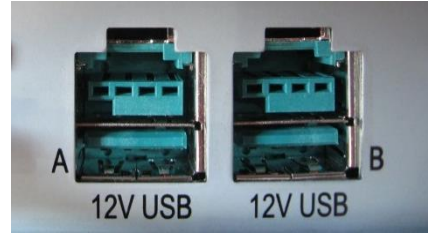

## USB Cables

### **CBA-U21-S07ZBR**

Shielded USB: Series A Connector, 7Ft. (2.1M), Straight, BC1.2



OR

### **CBA-U23-S07ZBR**

Shielded USB: Power Plus Connector, 7Ft. (2.1M), Straight, 12V



## Main features

- USB communication
- Automatically detects the host
- Powered from the host, including DS9908R
- Straight or coiled cables available, as well as various cable lengths
- Range of different host types cables available
- Compatible with DS9808 USB cables (Shielded USB Cables are recommended for best ESD performance)

## Power Supplies

Not Applicable for USB Cables

# Cable options

## RS-232



### RS-232 Cables

#### CBA-R01-S07PBR

RS232: DB9F, 7Ft. (2M) ST, TXD-2, W/ TTL Current Limit Protection [Requires external 5V power supply]

OR

#### CBA-R37-C09ZBR

RS232: DB9F, 9Ft. (2.8M) CL, PWR Pin 9, W/ TTL Current Limit Protection

OR

#### CBA-R08-S07ZBR

RS232: 7FT (2M), NIXDORF BEETLE- 5V Direct Power, W/ TTL Current Limit Protection



## Main features

- Serial communication
- Automatically detects the host
- External power supply not required, unless specified
- Straight or coiled cables available, as well as various cable lengths
- Range of different host types cables available
- Compatible with DS9808 & DS9808R RS-232 Cables

## Power Supplies for RS-232 cables

PWR-WUA5V4W0US	Power Supply, 5VDC, 100 - 240VAC, US/CA/MX/JP/TW
PWR-WUA5V4W0BR	Power Supply, 5VDC, 100 - 240VAC, Brazil
PWR-WUA5V4W0EU	Power Supply, 5VDC, 100 - 240VAC, EU/UK
PWR-WUA5V4W0CN	Power Supply, 5VDC, 100 - 240VAC, CN
PWR-WUA5V4W0AU	Power Supply, 5VDC, 100 - 240VAC, HK/AU



CBA-R01-S07PBR



 
+



PWR-WUA5V4W0US  
Power Supply  
5.2v, 1.1A

# Cable options

## IBM (RS-485)

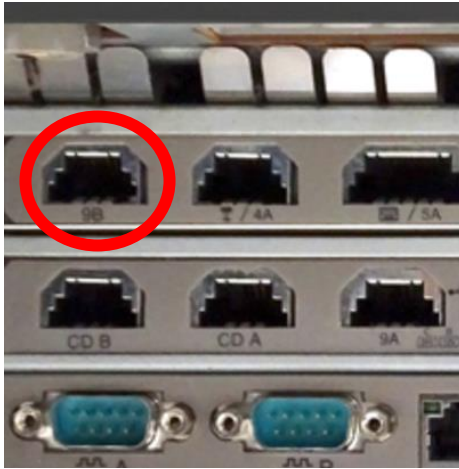

### IBM Cables

#### CBA-M61-S07ZAR

Assembly, Cable, Auto-Host  
detect – IBM: 468X/9X, 7FT(2M)  
Straight, Port 9B



### Main features

- IBM 4690 communication
- Automatically detects the host, but does not choose a port address
- External power supply not required

### Power Supplies

Not Applicable for IBM Cables



AG-DS9908 Feb 19 2021

ZEBRA and the stylized Zebra head are trademarks of Zebra Technologies Corp., registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners. ©2021 Zebra Technologies Corp. and/or its affiliates. All rights reserved.